 
 



Easycutter | Operation Manual










  



- ▶ Please read these instructions carefully before operation
- ► Take special care on safety guidlines in these instructions, to avoid injury to yourself and other people or objects
- ▶ Please follow the guidelines in these instructions to avoid damage to the device

Warning: - use outdoors or in well ventilated areas

- do not touch the hot wire when working

► Consider work area environment

- Do not expose tools to rain.
 - do not use the device in damp or wet conditions
 - keep work area well-lighted
 - do not use the device near flammable liquids or gases

- Keep other people away

- do not let anyone, other than those involved in the work, touch the device or the extension cord and keep them away from the work area

- Store unused tools

- when not in use, the device should be stored in a dry place, out of the reach of children

- Do not abuse the mains-cord


- never pull the mains-cord to disconnect it from the socket
- always keep the mains-cord away from heat, oil and sharp edges


- Disconnect device

- when not in use, before servicing or replacing the hot wire, always disconnect the device from the main power supply

Warning

 only use original spare hot wire to avoid damage to the device and also to the transformer

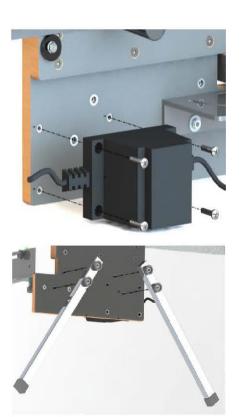

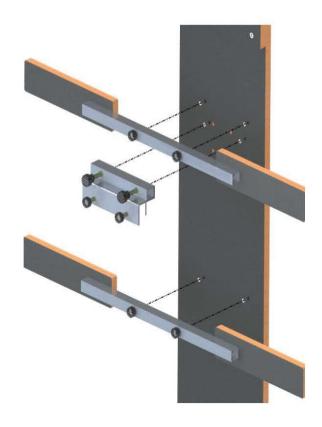



Technical data:

max. cutting length 1,300mm max.cutting height 310mm

net weight approx. 11.8kg

transformer 37V / 200 Watt 110V or 230V - 50/60 HZ / IP 68

Hilltop Products, Kirkstead Way, Golborne, Warrington, WA3 3PY

Website: www.hilltop-products.co.uk - Email: sales@hilltop-products.co.uk Tel: 01942 723101 - Fax: 01942 273817